

Compatibility

• Flush Wood Plus Insert Rectangle

Surround Panel Sizing


	Height	Width
Small (96100212)	30-1/2"	42"
Large (96100215)	34"	44"

Packing List

- Panel
- (2) Panel Mounting Brackets

Installation


1. Before installing, the insert should be in place with the flue attached. Attach the brackets as shown below, using the screws included in the hardware pack with the insert. Make sure the brackets are flush with the front of the convection chamber.

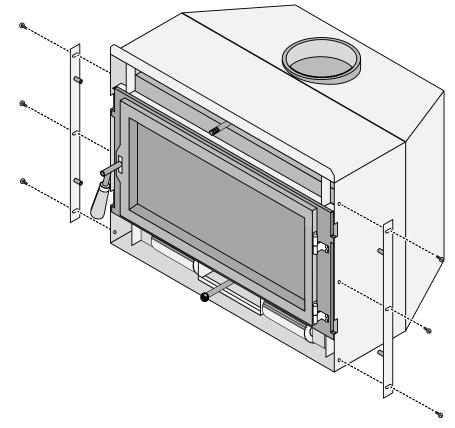



(Small 96100212 Large 96100215)

2. Attach the surround panel as shown below.

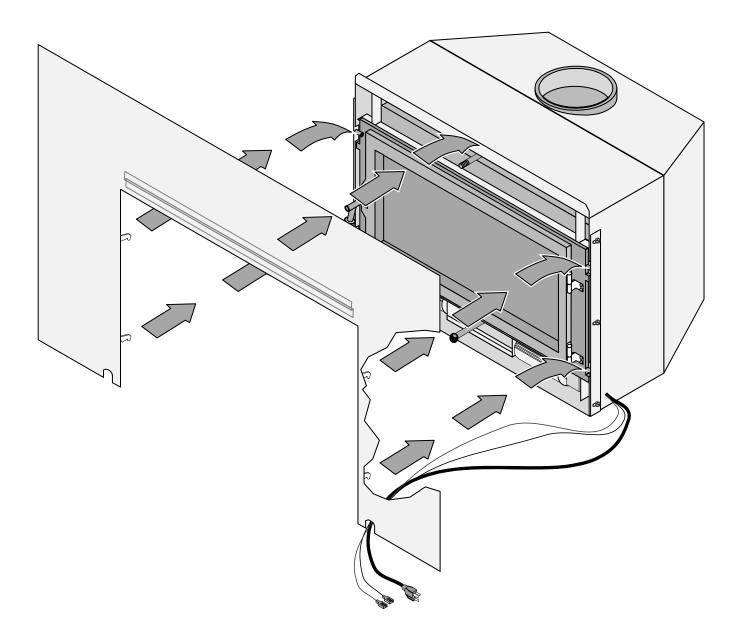

HINT: When installing the panel, route the wires through the notch on the bottom of the panel (either side).